

 $\epsilon$ 

# **Smart Sensors (Inductive Displacement Type)**

# **ZX-E Series**

# High-accuracy Detection of Metal Workpiece Displacement

- Sensor Heads support a wide variety of applications.
- Linearity can be adjusted for non-ferrous metals, such as SUS and aluminum, using the material selection function.
- Simple linearity compensation (teaching).
- Easily perform calculation for two Sensors by using a Calculating Unit.
- Prevent mutual interference for up to five Units by using a Calculating Unit



For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

# **Ordering Information**

## ■ Sensors

## Sensor Heads (Refer to Dimensions on page 11.)

Shape	Dimensions	Sensing distance	Resolution *1	Model
Cylindrical	3 dia. x 18 mm	0.5 mm	1 μm	ZX-EDR5T
	5.4 dia. x 18 mm	1 mm		ZX-ED01T *2
	8 dia. x 22 mm	2 mm		ZX-ED02T *2
Screw-shaped	M10 x 22 mm			ZX-EM02T *2
	M18 x 46.3 mm	7 mm		ZX-EM07MT *2
Flat	30 x 14 x 4.8 mm	4 mm		ZX-EV04T *2 *3
Heat-resistant, cylindrical	M12 x 22 mm	2 mm		ZX-EM02HT *4

<sup>\*1:</sup> For an average count of 4,096.

## Amplifier Units (Refer to Dimensions on page 13.)

Appearance	Power supply	Output type	Model
	DC	NPN	ZX-EDA11
		PNP	ZX-EDA41

Note: Compatible connection with the Sensor Head.

<sup>\*2:</sup> Models with Protective Spiral Tubes are also available. Add a suffix of "-S" to the above model numbers when ordering. (Example: ZX-ED01T-S) For detailed dimensions of the Protective Spiral Tube, refer to the information on the E39-F32A on the OMRON website.

<sup>\*3:</sup> Be sure to use ZX-EDA Amplifier Unit version 1,200 or later with the ZX-EV04T.

<sup>\*4:</sup> Be sure to use ZX-EDA Amplifier Unit version 1,300 or later with the ZX-EM02HT.

# **Accessories (Order Separately)**

Calculating Unit (Refer to Dimensions on page 14.)

Appearance	Model	
	ZX-CAL2	

## **Amplifier Mounting Brackets**

A ZX-XBE1 is provided with the Sensor. Order an Amplifier Mounting Bracket separately if required.

(Refer to Dimensions on page 14.)

Appearance	Model	Remarks
	ZX-XBE1	Attached to each Sensor Head
	ZX-XBE2	For DIN track mounting

## **Logging Tool for Personal Computers**

(Refer to Dimensions on page 15.)

Appearance	Name	Model
8	Communications Interface Unit (RS-232C)	ZX-SF11
		ZX-SW11EV3 (See note 1.)

## **Setup Tool for Personal Computer**

Appearance	Name	Model
9+ 0		ZX-SFW11EV3 (See note 1.)

Note 1. The ZX-SFW11EV3 or ZX-SW11EV3 is required to use the Smart Monitor with the ZX-LDA11-N/41-N. Earlier versions cannot be used.

The Smart Monitor Basic does not have a logging function. Other than the logging function, the Smart Monitor Basic supports the same functions as the Smart Monitor.

# Cables with Connectors on Both Ends (for Extension) (Refer to Dimensions on page 15.)\*

Cable length	Model	Quantity
1 m	ZX-XC1A	1
4 m	ZX-XC4A	
8 m	ZX-XC8A	

<sup>\*</sup> Robot cable models are also available. The model numbers are ZX-XC□R.

## **Bank Unit**

Appearance	Model
1245345 • 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	ZX-SB11

# **Specifications**

# **■** Sensor Heads

		Model	ZX-EDR5T	ZX-ED01T	ZX-ED02T/ EM02T	ZX-EM07MT	ZX-EV04T	ZX-EM02HT
Measurement range		0 to 0.5 mm	0 to 1 mm	0 to 2 mm	0 to 7 mm	0 to 4 mm	0 to 2 mm	
Sensing of	oject			Magnetic metals (Measurement ranges and linearities are different for non-magnetic metals. Refer to Engineering Data on page 4.)				
Standard re	eference	object	18×18×3 mm		30×30×3 mm	60×60×3 mm		45×45×3 mm
			Material: ferrous (	S50C)				
Resolution	*1		1 μm					
Linearity *2	2		±0.5% F.S.					±1.0% F.S. *5
Linear outp	out rang	е	Same as measure	ement range.				•
Temperature characteristic *3 (including Amplifier Unit)		0.15% F.S./°C				0.1% F.S./°C		
	Operatin	-	0 to 50°C (with no ic-					−10 to 200°C
temperature Storage *4		*4	ing or condensation)	ndensation) -20 to 70°C (with no icing or condensation)			(with no icing or condensation)	
Ambient humidity			Operating and storage: 35% to 85% (with no condensation)					
Insulation	resistan	ce	50 MΩ min. (at 500 DC)					
Dielectric s	-		1,000 VAC, 50/60 Hz for 1 min between charged parts and case					
Vibration r	esistanc	e (destruction)	10 to 55 Hz with 1.5-mm double amplitude for 2 h each in X, Y, and Z directions					
		destruction)	500 m/s², 3 times each in X, Y, and Z directions					
		on (Sensor Head)	,	IEC60529, IP65   IEC60529, IP67   IEC60529, IP60 *				IEC60529, IP60 *6
Connection			Connector relay (s		ength: 2 m)			
Weight (packed state)			Approx. 120 g	Approx. 140 g		Approx. 160 g	Approx. 130 g	Approx. 160 g
Materials Sensor Head Case Sensing surface Tightening nut		Brass	Stainless steel	Brass		Zinc (nickel-plated)	Brass	
		Heat-resistant AB	S				PEEK	
			-	\ I	l) (except ZX-ED02T)		Brass (nickel-plated)	
	Toothed washer			-	Iron (zinc-plated)	(except ZX-ED02T)		Iron (zinc-plated)
	Preampl	ifier	PES					
Accessories			Amplifier Mounting Brackets (ZX-XBE1), Instruction Manual					

- \*1:Resolution: The resolution is the deviation (±3σ) in the linear output when connected to the ZX-EDA Amplifier Unit. The above values indicate the deviations observed 30 minutes after the power is turned ON.
  - (The resolution is measured with OMRON's standard reference object at 1/2 of the measurement range with the ZX-EDA set for the maximum average count of 4,096 per period.)
  - The resolution is given at the repeat accuracy for a stationary workpiece, and is not an indication of the distance accuracy. The resolution may be adversely affected under strong electromagnetic fields.
- \*2: Linearity: The linearity is given as the error in an ideal straight line displacement output when measuring the standard reference object. The linearity and measurement values vary with the object being measured.
- \*3: Temperature characteristic: The temperature characteristic is measured with OMRON's standard reference object at 1/2 of the measurement range.
- \*4: The ambient temperature given is only for the sensor head. It is -10 to 60°C for the preamp.
- \*5: The value given is for an ambient temperature of 25°C.
- \*6: Do not use in moist environments because the case is not waterproof.

## **■** Amplifier Units

Model	ZX-EDA11	ZX-EDA41	
Measurement period *1	150 μs		
Possible average count settings	1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1,024, 2,048, or 4,096		
Linear output *2	Current output: 4 to 20 mA/F.S., Max. load resistance: 300 Ω		
	Voltage output: $\pm 4$ V ( $\pm$ 5 V, 1 to 5 V *3), Output impedance: 100 $\Omega$		
Judgement outputs	NPN open-collector outputs, 30 VDC, 50 mA max.	PNP open-collector outputs, 30 VDC, 50 mA max.	
(3 outputs: HIGH/PASS/LOW)	Residual voltage: 1.2 V max.	Residual voltage: 2 V max.	
Zero reset input, timing input, reset	ON: Short-circuited with 0-V terminal or 1.5 V or	ON: Supply voltage short-circuited or supply volt-	
input, judgement output hold input	less age within 1.5 V		
	OFF: Open (leakage current: 0.1 mA max.)	OFF: Open (leakage current: 0.1 mA max.)	
Function		ut value/resolution display	
	- Linearity adjustment (materials selection) - Display reverse - Display OFF n	- Scaling node - ECO mode	
	- Number of display digit changes - Sample hold	- Peak hold	
	- Bottom hold, peak-to-peak hold - Self-peak hold		
	- Average hold - Delay hold	- Zero reset	
	- Initial reset - Linearity initial		
	- OFF-delay timer - One-shot time		
		ld value setting - Position teaching Ith setting - Timing inputs	
	- Automatic teaching - Hysteresis wic - Reset input - Judgement ou	tput hold input - Monitor focus	
		- (A-B) calculations *4 - (A+B) calculations *4	
		ence prevention *4	
	- Sensor disconnection detection - Zero reset me		
	- Key lock		
Indications	Judgement indicators: High (orange), pass (green),		
	7-segment sub-digital display (yellow), power ON (green), zero reset (green), enable (green)		
Voltage influence (including Sensor)	0.5% F.S. of linear output value at ±20% of power supply voltage		
Power supply voltage	12 to 24 VDC ±10%, Ripple (p-p): 10% max.		
Current consumption	140 mA max. with power supply voltage of 24 VDC	,	
Ambient temperature	Operating and storage: 0 to 50°C (with no icing or co	ondensation)	
Ambient humidity	Operating and storage: 35% to 85% (with no conder	nsation)	
Insulation resistance	20 MΩ min. (at 500 DC)		
Dielectric strength	1,000 VAC, 50/60 Hz for 1 min		
Vibration resistance (destruction)	10 to 150 Hz with 0.7-mm double amplitude for 80 min each in X, Y, and Z directions		
Shock resistance (destruction)	300 m/s², 3 times each in 6 directions (up, down, left, right, forward, backward)		
Connection method	Prewired (standard cable length: 2 m)		
Weight (packed state)	Approx. 350 g		
Materials	Case: PBT (polybutylene terephthalate), Cover: Poly	ycarbonate	
Accessories	Instruction Manual		


<sup>\*1:</sup>The response time for the first linear output or judgment output is calculated as follows (with fixed sensitivity): Measurement period × (Average count setting + 1). The response time for the second and later outputs is the measurement period specified in the table.

<sup>\*2:</sup> The output can be switched between a current output and voltage output using a switch on the bottom of the Amplifier Unit.

<sup>\*3:</sup> Setting is possible via the monitor focus function.

<sup>\*4:</sup> A Calculating Unit (ZX-CAL2) is required.


# **Engineering Data (Reference Value)**

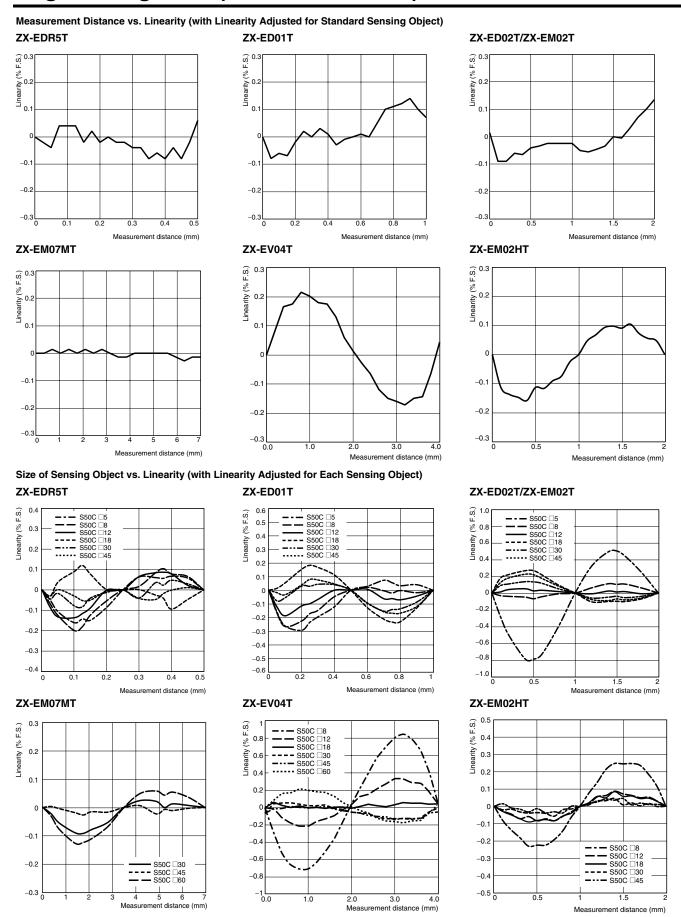


## Size of Sensing Object vs. Linearity (with Linearity Adjusted for Standard Sensing Object)

# 




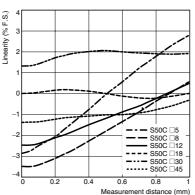


ZX-ED02T/ZX-EM02T

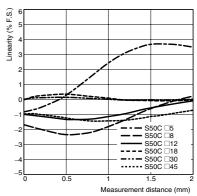


ZX-EM07MT

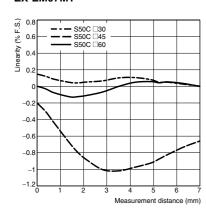

ZX-EV04T

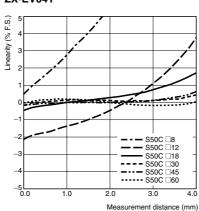


ZX-EM02HT

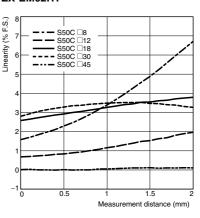


Material of Sensing Object vs. Linearity (with Linearity Adjusted for Each Sensing Object)




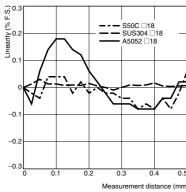


ZX-ED01

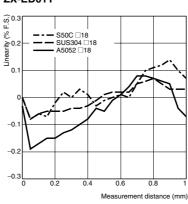


ZX-ED02T/ZX-EM02T

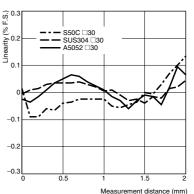

ZX-EM07MT

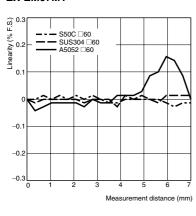


ZX-EV04T

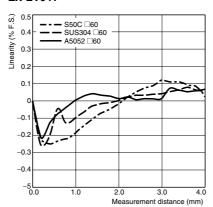


## Material of Sensing Object vs. Linearity (with Linearity Adjusted for Standard Sensing Object and Iron)


## **ZX-EDR5T**

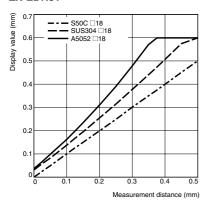


## ZX-ED01T

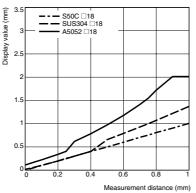


## ZX-ED02T/ZX-EM02T

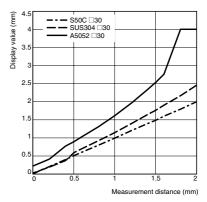

## ZX-EM07MT

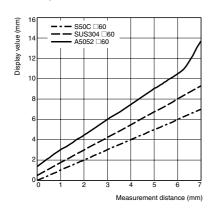


## ZX-EV04T

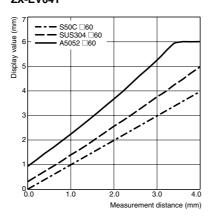


# Temperature Characteristics

## ZX-EM02HT

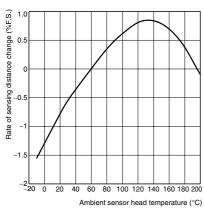


# I/O Circuit Diagrams


## NPN Amplifier Unit: ZX-EDA11

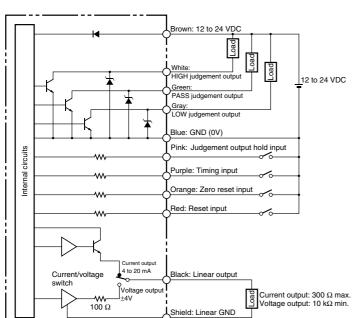

## **PNP Amplifier Unit: ZX-EDA41**

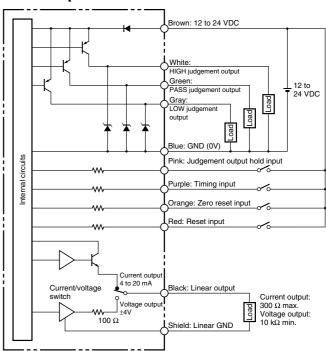

# **Connections: Amplifier Unit**

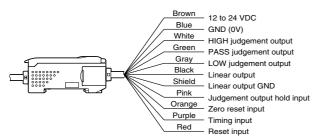

Note 1. Use a separate stabilized power supply for the Amplifier Unit, particularly when high resolution is required.

- 2. Wire the Unit correctly. Incorrect wiring may result in damage to the Unit. (Do not allow wiring, particularly the linear output, to come into contact with other lines.)
- 3. Use the blue (0-V) line for the power supply and use the shield wire (linear output ground) together with the black (linear output) line for linear output. Each of these grounds must be used for the designed purpose. When not using the linear output, connect the linear output ground to the 0-V ground.


# **Part Names**

## **Sensors**


**ZX-EDR5T** ZX-ED01T ZX-ED02T ZX-EM02T

ZX-EM07MT

ZX-EM02HT




## ZX-EV04T




# **Amplifier Units**

ZX-EDA11 ZX-EDA41

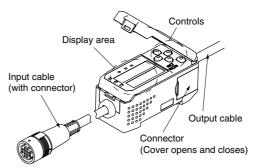

# **Calculating Unit**

**ZX-CAL2** 

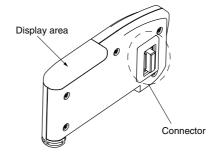

## **Precautions**

For details on information such as the usage precautions, → refer to the "ZX-E Series Smart Sensors Operation Manual" (Cat. No. Z166).

## ■ Design Precautions

Conform to the specified ratings and performance. Refer to *Specifications* on page 2 for details.

Objects of certain materials or shapes may not be detectable, or the detection accuracy may not be sufficiently high.

## **Environment**

Do not operate the product in locations subject to flammable or explosive gases.

In order to ensure safe operation and maintenance, do not install the product in the vicinity of high-voltage devices or power equipment.

# **■** Wiring

Do not use the product at voltages exceeding the rated values. Doing so may result in damage.

Do not connect the product to an AC power supply or connect the power supply in reverse.

Do not short-circuit the load for open-collector output.

Do not lay the power cable for the product together with or in the same duct as high-voltage lines or power lines. Doing so may result in incorrect operation or damage due to induction.

Do not connect or disconnect connectors while the power is ON. Doing so may result in damage.

# ■ Adjustment

## <u>Setting</u>

When setting threshold values, ensure that the Amplifier Unit's judgement output hold input line is ON so that there is no judgement output to external devices.

## **■** Other Precautions

Do not attempt to disassemble, repair, or modify the product.

Dispose of the product using standard procedures for industrial waste.

These Sensors are not compatible with the ZX-L $\square$  Smart Sensors (laser type). Do not connect combinations of ZX-E $\square$  Smart Sensors and ZX-T $\square$  Smart Sensors.

# ■ Correct Use Design Precautions


## **Power Supplies**

Allow a warm-up period of approximately 30 minutes after turning ON the power supply.

### Mutual Interference

Up to 5 Sensor Heads can be used together by connecting the ZX-CAL2 Calculating Unit between Amplifier Units.

When installing Sensor Heads facing each other or in parallel, separate them by the minimum distances given in the table below.



#### **Mutual Interference**

Model	Α	В
ZX-EDR5T	5 mm	20 (3.1) mm
ZX-ED01T	10 mm	50 (5.4) mm
ZX-ED02T	20 mm	50 (8) mm
ZX-EM02T	20 mm	50 (10) mm
ZX-EM07MT	100 mm	150 (30) mm
ZX-EV04T	80 mm	50 (14) mm
ZX-EM02HT	20 mm	50 (12) mm

**Note:** The figures in parentheses apply when the mutual interference prevention function is used.

## Compatibility

Sensors and Amplifier Units are mutually compatible. Sensors can be added or replaced individually.

# Influence of High-frequency Electromagnetic Fields

Using the product in the vicinity of devices that generate high-frequency electromagnetic fields, such as ultrasonic cleaning equipment, high-frequency generators, transceivers, mobile phones, and inverters, may result in malfunction.

## **Influence of Metallic Objects**

When installing the product, separate it from metallic objects by the distances shown below.



## Influence of Metallic Objects

Model	d	D
ZX-EDR5T	8 mm	9 mm
ZX-ED01T	10 mm	
ZX-ED02T/EM02T	12 mm	
ZX-EM07MT	55 mm	20 mm
ZX-EV04T	16 × 32 mm	4.8 mm
ZX-EM02HT	18 mm	9 mm

## **Wiring**

## Wiring Check

After wiring is completed, before turning ON the power, confirm that the power supply is connected correctly, that there are no faulty connections, such as load short-circuits, and that the load current is correct. Incorrect wiring may result in failure.

## **Cable Extension**

Do not extend the cable for the Sensor and the Amplifier Unit to a length exceeding 10 m. Use a ZX-XC\[Design A Extension Cable (sold separately) to extend the Sensor's cable. Extend the Amplifier Unit's cable using a shielded cable of the same type.

## **Power Supply**

When using a commercially available switching regulator, ground the FG (frame ground) terminal.

If the power supply line is subject to surges, connect a surge absorber that meets the conditions of the operating environment.

## Calculating Unit

When using a Calculating Unit, connect the linear output ground of the corresponding Amplifier Unit.

## **Connectors**

Do not connect or disconnect connectors while the power is ON.

Be sure hold to connectors by the cover when connecting or disconnecting.

## **Mounting**

## Handling

When mounting the Sensor Head, do not apply excessive shock by, for example, using a hammer. Doing so may result in damage or a reduction in the level of water-proofing. Also, there are screw-shaped models that require a toothed washer to allow for a tolerance in the tightening torque for the nut.

When using a heat-resistant model like the ZX-EM02HT, develop designs that account for thermal expansion due to rising sensing object temperature so the sensing object will never touch the sensing surface. Also note that any sudden rise in temperature will shorten the service life of the product.

## **Tightening Torque**

Do not apply excessive torque when tightening the nut. Use a toothed washer if necessary.




Model	Tightening torque
ZX-EM02T	15 N·m
ZX-EM07MT	
ZX-EM02HT	59 N⋅m

Note: The above figure applies for use with a toothed washer.

Mounting Cylindrical Models:

Tighten set screws with a tightening torque of 0.2 N·m max.





	**
Model	Α
ZX-EDR5T	9 to 18 mm
ZX-ED01T	
ZX-ED02T	11 to 22 mm

## **Installation Location**

Do not install the product in the following locations.

- Locations subject to temperatures outside the specified range
- Locations subject to condensation due to sudden temperature changes
- Locations subject to humidity levels outside range 35% to 85%
- · Locations subject to corrosive or flammable gases
- Locations subject to dust, salts, or metallic powder.
- Locations directly subject to vibrations and shocks
- · Locations subject to direct sunlight
- Locations subject to splashes of water, oil, or chemicals
- Locations subject to strong electromagnetic or electrical fields

## **Maintenance and Inspection**

- Be sure to turn OFF the power supply before adjusting or removing the Sensor Head.
- Cleaning:

Do not use thinners, benzine, acetone, or kerosene for cleaning.

# **Dimensions**


## **Sensors**

## **Sensor Heads**


ZX-EDR5T

# Dimensions with Mounting Bracket Attached Sensor head Vinyl-insulated coaxial round cable 5.1 dia., 9 conductors, standard length: 200 mm 1.7 dia., 1 conductor, standard length: 2 m 13 (15.5) 3 dia. Tomo, M3 holes Two, M3 holes

ZX-ED01T

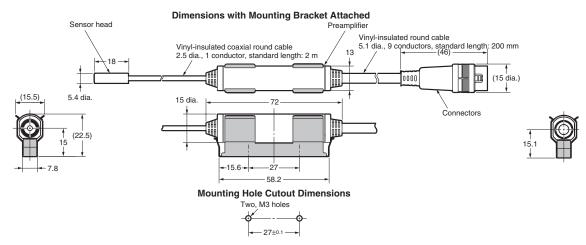


ZX-ED02T

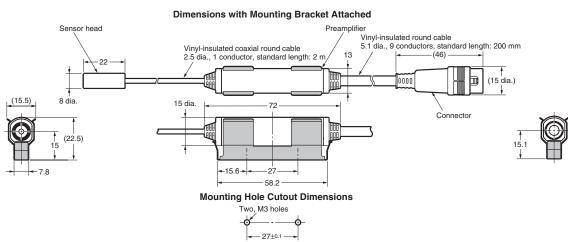


## ZX-EM02T

## **Dimensions with Mounting Bracket Attached**

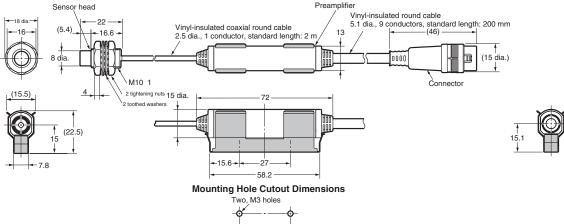


## ZX-EM07MT



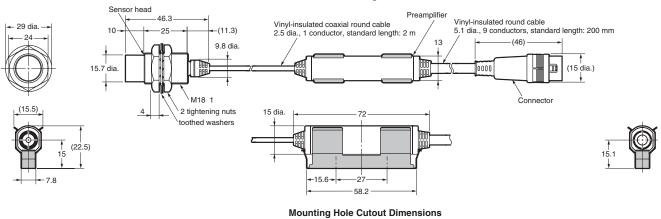




## **Dimensions with Mounting Bracket Attached**

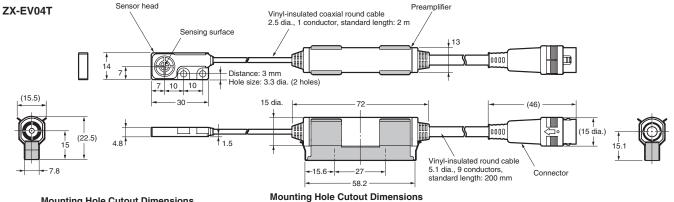


## **Mounting Hole Cutout Dimensions**



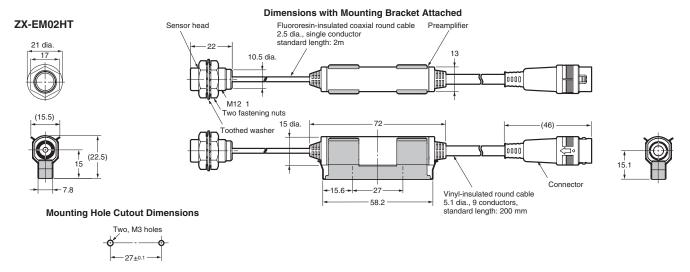


## **Amplifier Units**

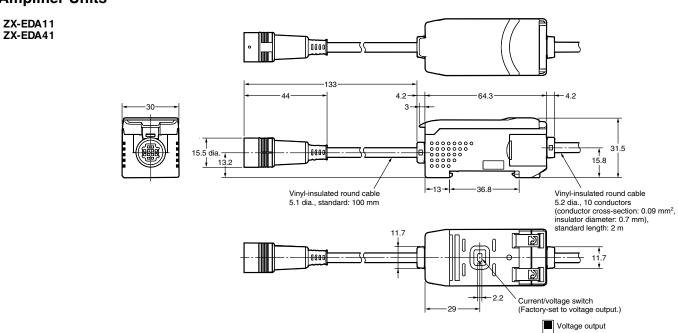


# **Accessories (Sold Separately)**

# **Preamplifier Mounting Bracket**

ZX-XBE1

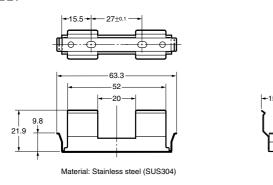


## ZX-XBE2

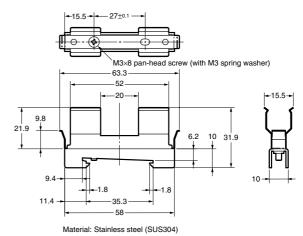


Calculating Unit

ZX-CAL2

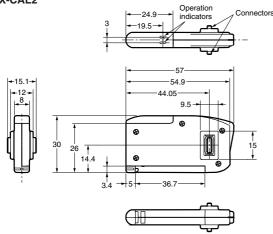


## **ZX-series Communications Interface Unit**

ZX-SF11

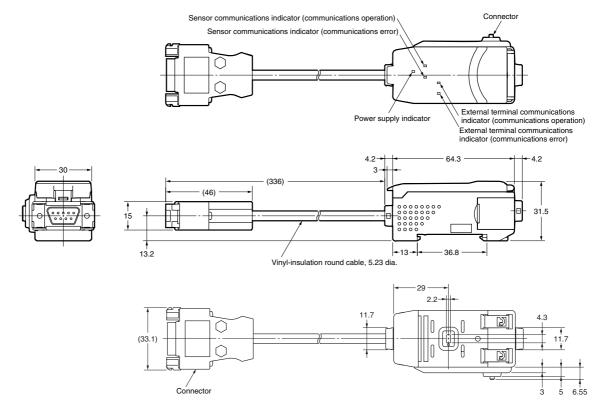

## **Cables with Connectors on Both Ends (for Extension)**

ZX-XC1A (1 m) ZX-XC4A (4 m) ZX-XC8A (8 m)





## ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

This document provides information mainly for selecting suitable models. Please read the manual carefully for information that the user must understand and accept before purchase, including information on warranty, limitations of liability, and precautions.

CSM\_7\_1\_0413 E331-E1

In the interest of product improvement, specifications are subject to change without notice.

## **OMRON Corporation**

**Industrial Automation Company** 

Sensing Devices Division H.Q. Application Sensors Division Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan

Tel: (81)75-344-7068/Fax: (81)75-344-7107

## Terms and Conditions Agreement

#### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

## Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

## Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

## Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

## Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

<u>Errors and Omissions.</u> <u>Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is accurate.</u> assumed for clerical, typographical or proofreading errors or omissions.

2013.5

In the interest of product improvement, specifications are subject to change without notice.

